



Benefits & Features

Veritas Guard Plans

✓ Emergency Roadside Assistance

We pay for the cost of emergency roadside services, including:

- Towing
- Battery Jumpstarts
- Flat Tire Changes
- Lockout Assistance
- Fuel Delivery (You are responsible for fuel costs)

✓ Rental Car Coverage

We pay for the expense of a rental car when your vehicle's failure is approved for repair.

✓ Trip Interruption Benefits

In the event you experience a breakdown 100 miles away from your home, we will pay for a portion of your meals and lodging for covered repairs.

✓ Nationwide Protection

All of our plans can be used nationwide, so if you are traveling and experience a breakdown, you can rest assured we work with repair facilities and dealerships throughout the United States and Canada.

✓ Transferable Coverage

If you sell your car, you can transfer the coverage to the new owner, which increases the value of your vehicle!

** Please view each contract for full details on coverage of each plan.*

All coverage options come with 24 hour roadside assistance, towing, and a rental car program.



Costs *WITHOUT* Veritas

Engine	Turbocharger	Transmission
\$6,783	\$2,165	\$4,102
Drive Axles	Transfer Case	
\$2,086	\$2,568	

** Based on 2020 claims cost to replace averages*

Cars have problems.

Everyone has insurance on their vehicles to protect them in the event of an accident. However, many people who have collision insurance never use it. On the other hand, nearly every vehicle will require repairs due to mechanical failure. The cost to replace an engine can exceed **\$6,000** and the cost to replace a transmission can exceed **\$4,000**. While these represent the major components, minor parts can still cost anywhere from **\$300** to **\$3,000**.

The question you need to ask is simple: **do you want to pay for these huge repair costs or would you rather someone else pay it for you?** With a Veritas vehicle protection plan, we pay the costs on covered repairs so you don't have to. The cost of a single covered repair can pay for the entire protection plan!

A mechanical breakdown can be very stressful, not only costing you money, but time. This is why **all our protection plans come with emergency roadside assistance, first day rental car benefits on covered repairs, and travel interruption coverage on covered repairs included at no extra cost.**

With a **Veritas protection plan**, you have someone to call if you are ever stranded on the road due to a breakdown. For covered repairs we will put you in a rental car and most importantly, cover the cost of your repairs to get you back on the road. We provide you with peace of mind, knowing your vehicle is covered by a company backed by an "A-" or better rated insurer and accredited by the Better Business Bureau.

All of our protection plans are accepted at dealerships and repair facilities throughout the United States and Canada.

**Please see section "WHAT TO DO IN THE EVENT OF A BREAKDOWN" of your contract for full details*

Protection plans may only be used in United States and Canada.

ADMINISTRATOR:

Veritas Global Protection Services, INC
3550 N Central Ave, Ste 800, Phoenix, AZ 85012
(888) 572-4310

OBLIGOR/PROVIDER:

Central Administrative Service Corporation, INC
3550 N Central Ave, Ste 800, Phoenix, AZ 85012

(888) 572-4310 | www.veritasprotection.com

SEL32GS

Rev. 070121



Veritas
Global Protection

SELECT PLANS



Peace of Mind, Worldwide
veritasprotection.com/select

SELECT PLANS

Levels of Coverage.



Powertrain

Covers the most expensive components on your vehicle including: basic powertrain coverage for the Engine (Gas or Diesel), Turbo/ Supercharger, Transmission (Automatic or Standard), Transfer Unit (4 x 4), and Drive Axles (Front or Rear).



Preferred

This includes all of the Veritas Select Powertrain coverage plus the components that fail the most frequently, including: Steering (Manual or Power), Basic Electrical, Front Suspension, Brakes, Basic Air Conditioning, Basic Electronics and Sport Utility.



Deluxe

Coverage includes all components covered by Powertrain and Preferred along with increased coverage for the Powertrain, Electrical, Front & Rear Suspension, Anti-Lock Brakes (ABS), Air Conditioning, Cooling, Fuel Delivery, and Interior/Exterior components.



Premier

Our best level of coverage! Veritas Select Premier protection plans cover nearly every mechanical component on your vehicle. The items not covered are listed in the exclusions section of your contract. Common maintenance items such as brake pads and oil changes are excluded from coverage. See your contract for full details.

* Please see your contract for a full list of coverage details and exclusion



Compare Coverage Levels →

Refer to our comparison chart on right to find the best Veritas Select Plan for your vehicle.

	engine (gas/diesel)
	All internally lubricated engine parts including: pistons, piston rings, piston pins, crankshaft and main bearings, connecting rods and bearings, camshaft and bearings, timing chain or belt, timing gears, tensioners/guides, intake and exhaust valves, valve springs, valve guides, oil pump and oil pump housing, push rods, rocker arms, rocker arm shafts, hydraulic and solid lifters; intake & exhaust manifold; distributor shaft and housing; harmonic balancer; metal valve covers; timing gear cover; air filter and housing; water pump; fuel pump; vacuum pump; thermostatically controlled air intake; oil pan; engine block and heads are covered if damaged by the Failure of an internally lubricated moving part. (All Coverages)
	transmission (automatic or standard)
	All internal parts; torque converter; vacuum modulator; mounts; covers, pans and cases are covered if damaged by the Failure of an internally lubricated moving part. (All Coverages)
	transfer unit (4x4)
	All internal parts; transfer case is covered if damaged by the Failure of an internally lubricated moving part. (All Coverages)
	drive axle
	All internal parts; "U" joints; propeller shafts; CV/Tripod joints; differential case is covered if damaged by the Failure of an internally lubricated moving part. (All Coverages)
	turbo / supercharger
	All internal parts; housing is covered if damaged by the Failure of an internally lubricated moving part. (All Coverages)
	air conditioning
	Compressor; internal assembly including pistons, rods, bearings, valves and shafts; clutch; coil and pulley; orifice tube; condenser; evaporator; manual switches. (Preferred, Deluxe, Premier) Expansion valve; dryer tank; accumulator; POA valve; hi/low pressure cut-off switch; ducts and outlet hoses; automatic temperature control programmer. (Deluxe and Premier)
	suspension
	Upper and lower control arms, control arm shafts and bushings; upper and lower ball joints; steering knuckles; stabilizer shaft, link and bushings; kingpins and bushings; strut bar and bushings; spindles and spindle supports. (Preferred, Deluxe, Premier) MacPherson struts; shackle bushings and eye bushings; springs, torsion bars and bushings; stabilizer linkage and bushings; wheel bearings and seals; automatic leveling unit compressor, sensor and limiter valve. (Deluxe and Premier)
	steering (manual or power)
	All internal parts in rack and pinion; all internal parts in recirculating ball housing; couplings; gear housing; power steering pump; steering main and intermediate shafts; power cylinder assembly; power steering cooler; control valve; Pitman arm; idler arm; tie rod ends; drag link/ center link. (Preferred, Deluxe, Premier) Control unit; actuator; mode selector; position sensor; rear tie rod assembly; rear gear assembly; cylinder barrel; center joint; pinion; power steering housing is covered if damaged by the Failure of an internal part. (Deluxe and Premier)
	cooling
	Radiator; fan clutch and fan; engine cooling fan motors; heater core; Engine Cooling Fan and Motor; Fan Clutch; Belt Tensioner; Radiator; Heater Core; Thermostat; Blower Motor; Hot Water Valve; Engine Oil Cooler; Cooler Lines and Fittings. (Deluxe and Premier)
	fuel system
	Fuel Pump, Fuel Injection Pump, Metal Fuel Lines, Fuel Pressure Regulator, Fuel Sending Unit, and Fuel Gauge. (Preferred, Deluxe, Premier) Fuel injector metering pump; fuel injectors; fuel distributor; diesel injection pump; fuel tank; metal fuel lines. (Deluxe and Premier)
	brakes
	Master cylinder; power assist booster and valve; wheel cylinders; calipers; combination valve; steel lines and fittings; backing plates; vacuum assist booster pump; springs, clips and retainers; self adjusters; rear activators; parking brake linkage and cables. (Preferred, Deluxe, Premier) ANTI-LOCK BRAKES (ABS): Electronic control unit; anti-lock computer module; wheel speed sensors/exciters; proportioning valves; high pressure hydraulic pump; electro-hydraulic proportioning control valves; accumulator. (Deluxe and Premier)
	electrical
	Alternator; voltage regulator; starter motor, drive and solenoid; power seat motors; power window motors, regulators and drives; front wiper motor including circuit board, relay and delay switch; manually operated switches for power windows, power seat(s), turn signal switch, headlamps, wipers (front and rear), emergency warning flashers; horn button; power door lock actuators; trunk actuator. Anti-detonation/knock sensor; ESC/EEC/ECM module; electronic module retard vacuum switch; electronic ignition module; igniter; electronic digital instrument cluster; digital driver information display and module; instrument panel printed circuit board. (Preferred, Deluxe, Premier) Fuel gauge sending unit; heated back glass elements (glass is not covered); rear wiper motor; heater blower motor; horn; factory installed sun/moon roof motor and its wiring harness and switches; convertible top motor and switches; power antenna motor, mast and switches, MAF/MAP sensor; EGR valve; DPFE valve; remote keyless entry transmitter and receiver; heated side view mirror element; cruise control servo, module and transducer; compass; speed sensor; thermometer. (Deluxe and Premier)

